



Taylor Digital Timer

Item # 5806

How to Use:

1. Press “**M**” button to set minutes and “**S**” button to set seconds.
2. Press “**START/STOP**” to start countdown.
3. The time can be paused and restarted by pressing “**START/STOP**”.
4. The alarm beeps when time is up, silence the timer by pressing the “**START/STOP**” button. The alarm will reset to the last programmed time.
5. Press “**M**” and “**S**” together to reset the time to 00:00.
6. To count up: When the display is at 00:00 press “**START/STOP**” to begin timing.

Note:

A plastic strip is used to prevent battery drain during shipping. Pull gently to remove before use. There is also a cling over the digital display, remove before use.

Battery Precautions:

1. Batteries may pose a choking hazard, do not let children handle batteries.
2. Do not dispose of batteries in fire, they may explode or leak.
3. Remove batteries if product will not be used for a long period of time.
4. Always replace all batteries at the same time; do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (ni-cad, ni-mh, etc.) batteries.
5. Recycle or dispose of batteries per local regulations.

Battery Replacement:

Open the battery door and remove old battery, replace with new battery following the “+” polarity symbol. Replace the battery cover.

Cleaning and Care:

Handwash only. Do not immerse in water or put in dishwasher

One (1) Year Warranty (Excluding Batteries)